

Maintenance and Repair Embelton Eco-Tuf Laminate



Maintenance

Your laminate floor is designed with low maintenance in mind. Follow these simple steps to achieve many years of enjoyment from your floor:

- Sweep or vacuum as often as necessary to remove any loose dirt or grit before it can scratch the floor.
- When a spill occurs, soak up the bulk liquid promptly.
- In areas of excessive traffic and wear, please make use of runners or area rugs.
- Use felt protectors under heavy pieces of furniture and chairs. Do not use rubber as it may leach into the floor.
- Use protective mats at all exterior entrances. Do not use rubber-based furniture or mats as the rubber may leach into the floor.
- Spiked heels or shoes in need of repair can severely damage your floor.
- Damp mop only – avoid excessive amounts of water. Steam mops must not be used.
- Never use oil soaps, wax, liquid or other household products to clean your floor.
- Keep animal nails trimmed.
- Protect your floor when using a dolly for moving furniture or appliances.
- Never slide or roll heavy furniture or appliances across the floor.
- Maintain relative humidity levels between 30% and 70%.

Repair

If part of your laminate floor gets damaged, it can easily be replaced. Flooring can be unclicked and re-laid with new boards of the same colour and style.

Lightly applied nail polish remover will remove most stains.

Technical specifications:

- HDF Core 920 to 950 Kg/M³
- Colours: American Oak, Merbau, Lime Washed Oak, Red Ironbark, Blackbutt, Hoop Pine, Jarrah Gloss, Spotted Gum Gloss, Tallowwood Gloss, Chestnut Gloss, Snow Gum Gloss, Australian Oak Gloss
- AC3 Rating – heavy domestic, light commercial
- Board dimensions: 1217 x 128 x 8.3 mm
- Unilin click system
- 12 boards per pack to cover 1.87 sq.m